

	GS 3.0 – 20pin		GS 3.3 – 20pin		GS 3.6 – 20pin	
	Basic	Vehicle specific	Basic	Vehicle specific	Basic	Vehicle specific
MAN	# 921100	# 923100	# 921000	# 923000		
	# 941100	# 943100	# 941000	# 943000		
DAF	# 921110	# 923110	# 921010	# 923010	# 925010	# 925110
	# 941110	# 943110	# 941010	# 943010	# 945010	# 945110
Iveco	# 921120	# 923120	# 921020	# 923020		
	# 941120	# 943120	# 941020	# 943020		
Renault	# 921130	# 923130				
	# 941130	# 943130				
ZF	# 921141	# 923141	# 921041	# 923041	# 925041	# 925141
	# 941141	# 943141	# 941041	# 943041	# 945041	# 945141
Bus				# 933460		
				# 943460		
Boot-File	# 907560		# 907580		# 908510	
	# 947560		# 947580		# 948510	
Repair Kit	# 901980				# 900785	
	# 941980				# 940785	
	Repair Kit (mechanic part only, no ECU). Reuse present ECU.					

	GS 3.0 – 18pin		GS 3.3 – 18pin		GS 3.6 – 18pin	
	Basic	Vehicle specific	Basic	Vehicle specific	Basic	Vehicle specific
Bus		# 924010		# 924020		
		# 944010		# 944020		
Boot-File	# 907570		# 907590			
	# 947570		# 947590			
Repair Kit	# 901980					
	# 941980					
	Repair Kit (mechanic part only, no ECU). Reuse present ECU.					